

28 TELETYPEWRITER  
KEYBOARD SEND-RECEIVE AND RECEIVE ONLY  
TELETYPEWRITER SET (KSR AND RO)  
DISASSEMBLY AND REASSEMBLY

1. GENERAL

1.01 This section specifies the sequence to be followed in disassembling a 28 teletypewriter of the keyboard send-receive (28 KSR) or receive-only (28 RO) design. Detailed routines for removing the individual components, and their various mechanisms are given in the individual sections containing the disassembly and reassembly routines for the particular components.

2. DISASSEMBLY AND REASSEMBLY

2.01 Where it is necessary to disassemble the 28 teletypewriter (28 KSR or 28 RO) for maintenance purposes, the individual compo-

nents should be removed in the following sequence and in accordance with the routines given in the individual sections containing the disassembly and reassembly routines for the particular components.

- (1) Teletypewriter Cabinet
- (2) Typing Unit
- (3) Teletypewriter Base (KSR or RO)
- (4) Motor Unit
- (5) Electrical Service Unit